

CORE Cashless Inc.

CCD Scanner Wand Setup for NUSCAN 1000U (USB) Trigger Activation Mode

START



1.



BEGIN CONFIG

2.



SET DEFAULTS

3.



USB KEYBOARD MODE

4.



TRIGGER ONLY MODE

5.



END OF TEXT NONE

6.



FULL ASCII CODE39

7.



PREAMBLE START

8.



` CHAR

9.



b CHAR

10.



2 CHAR

11.



SAVE

12.



POSTAMBLE START

13.



` CHAR

14.



SAVE

15.



END CONFIG

Scan barcodes top to bottom starting with the left column and then the right column
Scanner will beep, or a series of beeps, to indicate acceptance of each programming command.

CONFIDENTIAL

This document is proprietary information intended for use only by CORE Cashless Inc. and it's clients.